



Originale	Sostituto
Power	Power
Source	AV / Input / RDS
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
TTX/MIX	Text / Goto
0	0
PRE-CH	Fav / Marker / PC
Vol+	Vol+
Mute	Mute / Dimmer
CH+	CH+ / Page+

Originale	Sostituto
Vol-	Vol-
CH List	Smart / List
CH-	CH- / Page-
Netflix	Shift + Red / Netflix /
Home	Menu / Home
prime video	Shift + Blue / Prime
Rakuten Tv	TV/Radio /
Up	Up
Guide	Guide / EPG / -/--
Left	Left
Enter	OK
Right	Right
Return	Back / Return
Down	Down
Exit	Exit / Cancel / Clear
Red	Red / Netflix / Search
Green	Green / APP / Repeat



