



Originale	Sostituto
Power	Power
Mute	Mute / Dimmer
1	1
2	2
3	3
Lang	Audio / Lang I/II
4	4
5	5
6	6
Game	Picture / Format
7	7
8	8
9	9
Tv/Radio	TV/Radio /
FAV	Fav / Marker / PC
0	0
Recall	Back / Return

Originale	Sostituto
Dev.List	Display / Media
EPG	Guide / EPG / -/-
Subtitle	Subtitle / EQ
Text	Text / Goto
Auto	Setup / OPT /
Menu	Menu / Home
Zoom	Zoom / Size
Info	Info / Angle
Exit	Exit / Cancel / Clear
Up	Up
CH+	CH+ / Page+
Left	Left
Vol-	Vol-
Enter	OK
Right	Right
Vol+	Vol+
CH-	CH- / Page-





Originale	Sostituto	Originale	Sostituto
	Down		Down
	Filelist		Smart / List
	Rec		Rec / Rec Mode
	Stop		Stop / Hold
	Play		Play / Slow
	Pause		Pause / Step / Freeze
	<<		<< / Tune-
	>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Red/FAV./Daily		Red / Netflix / Search
	Green/Del./Weekl		Green / APP / Repeat
	Yellow/Move/P.Inf		Yellow / YouTube / Repeat
	Blue/Look/Timer		Blue / Prime Video / Random

Originale	Sostituto

