 

 

 



 



 



 



 

 

 

 

 

 
 




 



 

 

 

 

 

 

 

 

















| Originale | | Sostituto | | Originale | | Sostituto | |
|---|-----------|---|-------------------|---|------------|---|-----------------------|
|  | Power |  | Power |  | Info |  | Info / Angle |
|  | Mute |  | Mute / Dimmer |  | Menu |  | Menu / Home |
|  | 1 |  | 1 |  | Up |  | Up |
|  | 2 |  | 2 |  | Exit |  | Exit / Cancel / Clear |
|  | 3 |  | 3 |  | Left |  | Left |
|  | Mark |  | Fav / Marker / PC |  | OK |  | OK |
|  | 4 |  | 4 |  | Right |  | Right |
|  | 5 |  | 5 |  | Text |  | Text / Goto |
|  | 6 |  | 6 |  | Down |  | Down |
|  | Tv/Radio |  | TV/Radio / |  | EPG |  | Guide / EPG / -/- |
|  | 7 |  | 7 |  | << |  | << / Tune- |
|  | 8 |  | 8 |  | Stop |  | Stop / Hold |
|  | 9 |  | 9 |  | Play |  | Play / Slow |
|  | Source |  | AV / Input / RDS |  | Pause |  | Pause / Step / Freeze |
|  | Timeshift |  | Smart / List |  | I<< |  | I<< / Preset- |
|  | 0 |  | 0 |  | Rec |  | Rec / Rec Mode |
|  | Recall |  | Back / Return |  | Audio/Lang |  | Audio / Lang I/II |





| Originale | Sostituto |
|-----------|-----------------------------|
| >> | >> / Tune+ |
| Page Up | + Shift + CH+ / |
| Page Down | + Shift + CH- / |
| >> | >> / Preset+ |
| Vol- | Vol- |
| Vol+ | Vol+ |
| CH- | CH- / Page- |
| CH+ | CH+ / Page+ |
| HDMI | + Shift + 0 |
| Zoom | Zoom / Size |
| Subtitle | Subtitle / EQ |
| Auto/Goto | D.Menu / Top |
| Red | Red / Netflix / Search |
| Green | Green / APP / Repeat |
| Yellow | Yellow / YouTube / Repeat |
| Blue | Blue / Prime Video / Random |

| Originale | Sostituto |
|-----------|-----------|
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |
| | |

