



Originale	Sostituto
	1
	3
	Power
	2
	4
	5
	6
	+ Shift + Power
	7
	8
	9
	Sleep / Timer
	Guide / EPG / -/-
	+ Shift + Back / Return
	0
	+ Shift + Exit / Cancel / Clear
	Fav / Marker / PC

Originale	Sostituto
	+ Shift + Fav / Marker / PC
	+ Shift + Mute / Dimmer
	Exit / Cancel / Clear
	+ Shift + Smart / List
	Zoom / Size
	+ Shift + Zoom /
	Info / Angle
	AV / Input / RDS
	Back / Return
	Audio / Lang I/II
	Eject / Surround
	Subtitle / EQ
	TV/Radio /
	+ Shift + Subtitle / EQ
	+ Shift + Setup / OPT / Tools
	Green / APP / Repeat
	D.Menu / Top





Originale	Sostituto
	Up
	+ Shift + TV/Radio / Program
	Menu / Home
	Left
	+ Shift + CH- /
	OK
	+ Shift + CH+ /
	Right
	Setup / OPT /
	Down
	Display / Media
	Red / Netflix / Search
	Smart / List
	+ Shift + Play /
	Yellow / YouTube / Repeat
	Play / Slow
	+ Shift + 7

Originale	Sostituto
	Stop / Hold
	Pause / Step / Freeze
	I<< / Preset-
	+ Shift + Left
	>>I / Preset+
	+ Shift + Right
	<< / Tune-
	>> / Tune+
	CH+ / Page+
	Picture / Format
	Sound / Title
	CH- / Page-
	+ Shift + Display / Media
	Text / Goto
	Mute / Dimmer
	Vol-
	+ Shift + Down





	Originale	Sostituto	Originale	Sostituto
	Vol+	Vol+		
	Tv Vol+	Shift + Up		

