

 

 

 

 




 


 

 



 





 






 

 


 


 

 


 

 


 

 

 

 

 





| Originale | Sostituto |
|--|--|
|  Power |  Power |
|  Open/Close |  Eject / Surround |
|  Power Tv |  Shift + Power |
|  DVD |  Shift + 2 |
|  HDD |  Shift + 7 |
|  AV |  AV / Input / RDS |
|  AV Tv |  Smart / List |
|  1 |  1 |
|  2 |  2 |
|  3 |  3 |
|  PR+ Tv |  Shift + CH+ / |
|  4 |  4 |
|  5 |  5 |
|  6 |  6 |
|  PR- Tv |  Shift + CH- / |
|  7 |  7 |
|  8 |  8 |

| Originale | Sostituto |
|---|--|
|  9 |  9 |
|  Vol+ Tv |  Vol+ |
|  Tv/DVD |  TV/Radio / |
|  0 |  0 |
|  Mute Tv |  Mute / Dimmer |
|  Vol- Tv |  Vol- |
|  Display |  Display / Media |
|  Text |  Text / Goto |
|  Tv/Radio |  Shift + TV/Radio / Program |
|  Rec |  Rec / Rec Mode |
|  Zoom |  Zoom / Size |
|  Repeat |  Shift + Green / APP / |
|  << / Tune- |  << / Tune- |
|  >> / Tune+ |  >> / Tune+ |
|  I<< / Preset- |  I<< / Preset- |
|  >>I / Preset+ |  >>I / Preset+ |
|  Pause |  Pause / Step / Freeze |





| Originale | | Sostituto | | Originale | | Sostituto | |
|-----------|-----------------|-----------|-----------------------------|-----------|-----------|-----------|-------------------------|
| | Play | | Play / Slow | | Marker | | Fav / Marker / PC |
| | Stop | | Stop / Hold | | Search | | Shift + Red / Netflix / |
| | Home | | Shift + Menu / | | Dubbing | | D.Menu / Top |
| | Up | | Up | | Clear | | Exit / Cancel / Clear |
| | PR+ | | CH+ / Page+ | | Tilte | | Setup / OPT / |
| | Menu/List | | Menu / Home | | Thumbnail | | Sound / Title |
| | Left | | Left | | Random | | Shift + Blue / Prime |
| | Enter | | OK | | CHP.ADD | | Picture / Format |
| | Right | | Right | | PIP | | Audio / Lang I/II |
| | Guide | | Guide / EPG / -/-- | | Showview | | Subtitle / EQ |
| | PR- | | CH- / Page- | | | | |
| | Down | | Down | | | | |
| | Return | | Back / Return | | | | |
| | Red/FAV | | Red / Netflix / Search | | | | |
| | Green/Audio | | Green / APP / Repeat | | | | |
| | Yellow/Subtitle | | Yellow / YouTube / Repeat | | | | |
| | Blue/Timeshift | | Blue / Prime Video / Random | | | | |

