

 













 



 




















 


 



 

 















 





Originale		Sostituto		Originale		Sostituto	
	Title Del		Shift + 1		TV Channel-		Shift + CH- /
	Level Meter		Shift + 2		7		7
	Motion Sensor		Shift + 3		8		8
	Power Audio		Power		9		9
	Display Chara		Shift + 4		Karaoke Setting		Smart / List
	Eco Dimmer		Shift + Mute / Dimmer		10		Guide / EPG / -/-
	Tv/Video		TV/Radio /		Sleep		Sleep / Timer
	Power Tv		Shift + Power		0		0
	1		1		A.STBY		Shift + 0
	2		2		+10		Fav / Marker / PC
	3		3		Clock/Timer		Shift + Sleep / Timer
	MIC Vol+		Shift + Up		Mic Mix		Shift + Smart / List
	TV Channel+		Shift + CH+ /		Karaoke Scoring		Shift + AV / Input / RDS
	4		4		Reserve		Shift + Green / APP /
	5		5		Vocal Masking		Shift + Red / Netflix /
	6		6		Vocal Support		Shift + Subtitle / EQ
	MIC Vol-		Shift + Down		Top Menu/PG		D.Menu / Top





Originale	Sostituto	Originale	Sostituto
 Menu/PL	 Menu / Home	 Back/Tuner/Play Mode	 Back / Return
 Cancel	 Exit / Cancel / Clear	 Return	 Shift + Back / Return
 Audio Vol+	 Vol+	 I<<	 I<< / Preset-
 Tv Vol+	 Shift + Right	 I<< Gruppo Title Skip	 Shift + I<< / Preset-
 Up	 Up	 >>I	 >>I / Preset+
 Left	 Left	 Gruppo Title Skip >>I	 Shift + >>I / Preset+
 Enter/Set	 OK	 <<	 << / Tune-
 Right	 Right	 >>	 >> / Tune+
 Down	 Down	 Gruppo Title >>	 Shift + >> /
 Audio Vol-	 Vol-	 Play/Pause	 Red / Netflix / Search
 Tv Vol-	 Shift + Left	 Play/Pause USB	 Shift + Play /
 On Screen	 Display / Media	 FM Tuner	 Shift + 6
 Set Up	 Setup / OPT /	 Tuner AM	 Blue / Prime Video / Random
 Fade Muting	 Mute / Dimmer	 Audio/MPX	 Audio / Lang I/II
 Stop	 Stop / Hold	 Subtitle	 Subtitle / EQ
 Play	 Play / Slow	 Zoom	 Zoom / Size
 Pause	 Pause / Step / Freeze	 Angle	 Info / Angle



