





Originale	Sostituto
 Power	 Power
 Tv Vol+	 Vol+
 CH+	 CH+ / Page+
 Tv Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 +10/100+	 Guide / EPG / -/--
 0	 0
 10/Tv Return	 Fav / Marker / PC

Originale	Sostituto





Originale	Sostituto
 Power	 Power
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 <<	 << / Tune-
 >>	 >> / Tune+
 CH+	 CH+ / Page+
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9

Originale	Sostituto
 0	 0





Originale	Sostituto
 Power	 Power
 Muting	 Mute / Dimmer
 Play	 Play / Slow
 Pause/FM Mode	 Pause / Step / Freeze
 Stop/Memory	 Stop / Hold
 ←/Rec	 Rec / Rec Mode
 <<	 << / Tune-
 >>	 >> / Tune+
 I<</Tuning-	 I<< / Preset-
 >>I/Tuning+	 >>I / Preset+
 Surr.	 Sound / Title
 Audio	 Audio / Lang I/II
 Subtitle	 Subtitle / EQ
 Open/Close	 Eject / Surround
 Page	 Picture / Format
 Zoom	 Zoom / Size
 Sleep	 Sleep / Timer

Originale	Sostituto
 Tv/Video	 TV/Radio /
 Setting	 D.Menu / Top
 Set Up	 Setup / OPT /
 VFP/Scan Mode	 AV / Input / RDS
 Menu	 Menu / Home
 Up	 Up
 Angle	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Cancel	 Exit / Cancel / Clear
 Down	 Down
 Return	 Back / Return
 Audio Vol+	 Vol+
 S.WFR+	 CH+ / Page+
 Audio Vol-	 Vol-
 On Screen	 Display / Media





Originale	Sostituto
S-WFR-	CH - / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
+10	Guide / EPG / -/--
0	0
10/Tv Return	Fav / Marker / PC
Repeat	Green / APP / Repeat
A-B RPT	Yellow / YouTube / Repeat
AUX Digital	Blue / Prime Video / Random
Dimmer	Shift + Mute / Dimmer

Originale	Sostituto
Play Mode	Shift + Play /
Title Group	Shift + Sound / Title
FM/AM	Shift + TV/Radio / Program
Top Menu	Shift + D.Menu / Top Menu
Center+	Shift + Up
Center-	Shift + Down
L-Surr+	Shift + Vol+
Treble+	Shift + CH+ /
L-Surr-	Shift + Vol-
Treble-	Shift + CH- /
DVD	Shift + 2
FL. Disp	Shift + 5
AUX	Shift + 7
Surr R+	Shift + 8
Surr R-	Shift + 0

