









 


























 

 

 





 



 

 
















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 Record	 Rec / Rec Mode
 <</Alt	 << / Tune-
 >>/List	 >> / Tune+
 I<<	 I<< / Preset-
 >>I	 >>I / Preset+
 Audio	 Audio / Lang I/II
 SUB	 Subtitle / EQ
 Zoom	 Zoom / Size
 Tv/Radio	 TV/Radio /
 Text	 Text / Goto
 Menu	 Menu / Home
 Up	 Up
 Info	 Info / Angle

Originale	Sostituto
 Left	 Left
 OK	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down
 Vol+	 Vol+
 A-Scan/A-Time	 Smart / List
 CH+	 CH+ / Page+
 Vol-	 Vol-
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7





Originale	Sostituto
	8
	9
	Guide / EPG / -/--
	0
	Fav / Marker / PC
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	Shift + 8

Originale	Sostituto

