 

 









 



 

 









 

 









 

 

 

 





 

 

















Originale	Sostituto
 3D	 Zoom / Size
 Power	 Power
 TV/Radio	 TV/Radio /
 Guide	 Guide / EPG / -/--
 Info	 Info / Angle
 Ratio	 Picture / Format
 Input	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Shift + Smart / List

Originale	Sostituto
 0	 0
 Q.View	 Smart / List
 Settings	 Setup / OPT /
 Up	 Up
 Q.Menu/3D	 D.Menu / Top
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Vol+	 Vol+
 FAV	 Fav / Marker / PC
 PR+	 CH+ / Page+
 Vol-	 Vol-
 Simplink	 Display / Media
 PR-	 CH- / Page-



