

 

 

 



















 





 





Originale	Sostituto
 Score	 Smart / List
 Display	 Display / Media
 Sleep	 Sleep / Timer
 Power	 Power
 Play Mode	 Blue / Prime Video / Random
 Repeat/FM	 Green / APP / Repeat
 Party Light	 Red / Netflix / Search
 Light Mode	 Yellow / YouTube / Repeat
 Rec To USB	 Rec / Rec Mode
 Up	 Up
 Tuner Menu	 Menu / Home
 Left/Folder-	 Left
 OK	 OK
 Right/Folder+	 Right
 Back	 Back / Return
 Down	 Down
 Options	 Setup / OPT /

Originale	Sostituto
 Function	 D.Menu / Top
 Mega Bass	 Sound / Title
 Sound Field	 Audio / Lang I/II
 <</Tuning-	 << / Tune-
 Play	 Play / Slow
 >>/Tuning+	 >> / Tune+
 I<</Preset-	 I<< / Preset-
 Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 >>I/Preset+	 >>I / Preset+
 Vocal Fader	 Mute / Dimmer
 Vol+	 Vol+
 Key Control #	 CH+ / Page+
 Mic Echo	 TV/Radio /
 Vol-	 Vol-
 Key Control b	 CH- / Page-



Tools