





















 













 












Originale	Sostituto	Originale	Sostituto
 Power	 Power	 PBC/Menu	 Menu / Home
 Source	 AV / Input / RDS	 Clear	 Exit / Cancel / Clear
 Function	 D.Menu / Top	 0	 0
 TFT Mode	 Display / Media	 Setup	 Setup / OPT /
 1	 1	 Up	 Up
 2	 2	 Search	 Red / Netflix / Search
 3	 3	 Vol+	 Vol+
 CH+	 CH+ / Page+	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 Vol-	 Vol-
 CH-	 CH- / Page-	 Play	 Play / Slow
 7	 7	 Pause	 Pause / Step / Freeze
 8	 8	 Down	 Down
 9	 9	 Stop	 Stop / Hold
 --/10+	 Guide / EPG / --	 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer	 I<<	 I<< / Preset-

Originale	Sostituto	Originale	Sostituto
 PBC/Menu	 Menu / Home	 Clear	 Exit / Cancel / Clear
 0	 0	 Setup	 Setup / OPT /
 Up	 Up	 Search	 Red / Netflix / Search
 Vol+	 Vol+	 Left	 Left
 OK	 OK	 Right	 Right
 Vol-	 Vol-	 Play	 Play / Slow
 Pause	 Pause / Step / Freeze	 Down	 Down
 Stop	 Stop / Hold	 Audio	 Audio / Lang I/II
 I<<	 I<< / Preset-		



