






























 








































Originale	Sostituto
 Power	 Power
 <</Size	 << / Tune-
 Play	 Play / Slow
 Pause/Timeshift	 Pause / Step / Freeze
 >>/Subpage	 >> / Tune+
 Source	 AV / Input / RDS
 I<<	 I<< / Preset-
 Stop	 Stop / Hold
 >>I/Index	 >>I / Preset+
 Menu	 Menu / Home
 Mouse	 Back / Return
 Smart TV	 Smart / List
 Exit	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 OK	 OK
 Right	 Right

Originale	Sostituto
 Vol+	 Vol+
 Down	 Down
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Mute	 Mute / Dimmer
 Audio	 Audio / Lang I/II
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 Display	 Display / Media
 4	 4
 5	 5
 6	 6
 Text	 Text / Goto
 7	 7
 8	 8





Originale	Sostituto
	9
	+ Shift + Stop /
	Rec / Rec Mode
	0
	Fav / Marker / PC
	Subtitle / EQ
	Red / Netflix / Search
	Green / APP / Repeat
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random

Originale	Sostituto

