







 

 







 



















Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 PPV	 TV/Radio /
 Opciones	 Setup / OPT /
 Video Club	 Subtitle / EQ
 Menu	 Menu / Home
 Guia	 Guide / EPG / -/--
 Idiomas	 Audio / Lang I/II
 Herramientas	 Smart / List
 Tv/Salir	 Exit / Cancel / Clear
 ?/Ayuda	 Fav / Marker / PC
 Atras	 Back / Return
 B	 Display / Media
 Info	 Info / Angle
 Vol+	 Vol+
 Up	 Up
 PRG+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
	 << / Tune-
	 Left
 OK	 OK
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
	 Right
	 >> / Tune+
	 CH- / Page-
	 Down
 Stop	 Stop / Hold
 Red	 Red / Netflix / Search
 Gray	 Zoom / Size
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 1	 1





	Originale	Sostituto		Sostituto
	2			
	3			
	4			
	5			
	6			
	7			
	8			
	9			
	0			

	Originale	Sostituto

