

 

 



 

 

 

 

 





 





 






 

 




	Originale	Sostituto
	Mute	 Mute / Dimmer
	Still	 Shift + Pause / Step /
	I/II	 Audio / Lang I/II
	Power	 Power
	Scan	 Smart / List
	Sleep	 Sleep / Timer
	PIP	 Picture / Format
	Display	 Display / Media
	1	 1
	2	 2
	3	 3
	4	 4
	5	 5
	6	 6
	7	 7
	8	 8
	9	 9

	Originale	Sostituto
	TV/AV	 AV / Input / RDS
	0	 0
	Swap	 Back / Return
	P.STD	 Setup / OPT /
	S.STD	 Sound / Title
	Up	 Up
	CH+	 CH+ / Page+
	Vol-	 Vol-
	Left	 Left
	Menu	 Menu / Home
	OK	 OK
	Right	 Right
	Vol+	 Vol+
	CH-	 CH- / Page-
	Down	 Down
	[=]	 Text / Goto
	[+]	 Subtitle / EQ





Originale		Sostituto		Originale		Sostituto	
	[ /= ]		TV/Radio /				
	<</[...]		<< / Tune-				
	>>/[?]		>> / Tune+				
	[X]		Fav / Marker / PC				
	Red/↑		Red / Netflix / Search				
	Green/←		Green / APP / Repeat				
	Yellow/→		Yellow / YouTube / Repeat				
	Blue/Enter/H.Lock		Blue / Prime Video / Random				
	White/↓/CH.List		Guide / EPG / -/--				
	Pause/Timer		Pause / Step / Freeze				
	[◆]/Zoom		Zoom / Size				
	Exit		Exit / Cancel / Clear				

