



Originale	Sostituto
Standby	Power
DTV/VCR	AV / Input / RDS
Mute	Mute / Dimmer
Info	Info / Angle
Pause	Pause / Step / Freeze
Menu	Menu / Home
EPG	Guide / EPG / -/--
Exit	Exit / Cancel / Clear
Up	Up
CH+ / Page+	CH+ / Page+
Vol- / Left	Vol- / Left
OK	OK
Right	Right
Vol+ / Right	Vol+ / Right
CH- / Page-	CH- / Page-
Down	Down

Originale	Sostituto
Favorite	Fav / Marker / PC
1	1
2	2
3	3
Game	Display / Media
4	4
5	5
6	6
Recall	Back / Return
7	7
8	8
9	9
0	0
Tv/Radio	TV/Radio /
Audio	Audio / Lang I/II
Subtitle	Subtitle / EQ
Text	Text / Goto



