



 















 

 



 

 









Originale	Sostituto
 Standby	 Power
 Info	 Info / Angle
 Subtitle	 Subtitle / EQ
 Mute	 Mute / Dimmer
 Page+	 CH+ / Page+
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 Page-	 CH- / Page-
 Stop	 Stop / Hold
 >>	 >> / Tune+
 Menu	 Menu / Home
 Up/CH+	 Up
 Exit	 Exit / Cancel / Clear
 Left	 Left
 Vol-	 Vol-
 OK	 OK

Originale	Sostituto
 Right	 Right
 Vol+	 Vol+
 Record	 Rec / Rec Mode
 Down/CH-	 Down
 Timeshift	 Sleep / Timer
 1	 1
 2	 2
 3	 3
 Recall	 Back / Return
 4	 4
 5	 5
 6	 6
 EPG	 Guide / EPG / -/-
 7	 7
 8	 8
 9	 9
 0	 0





	Originale	Sostituto
	TTX	 Text / Goto
	Tv/Radio	 TV/Radio /
	Audio	 Audio / Lang I/II
	File	 Smart / List
	DTV/VCR	 AV / Input / RDS
	I>/Slow	 Zoom / Size
	FAV	 Fav / Marker / PC
	Goto	 +  Shift + Text /
	Red	 Red / Netflix / Search
	Green	 Green / APP / Repeat
	Yellow	 Yellow / YouTube / Repeat
	Blue	 Blue / Prime Video / Random

	Originale	Sostituto

