

















 




























Originale	Sostituto	Originale	Sostituto
 Up	 Up	 []	 Subtitle / EQ
 Page+	 CH+ / Page+	 7	 7
 Left	 Left	 8	 8
 Vol-	 Vol-	 9	 9
 OK	 OK	 Input	 AV / Input / RDS
 Right	 Right	 Sleep	 Sleep / Timer
 Vol+	 Vol+	 0	 0
 Page-	 CH- / Page-	 Mute	 Mute / Dimmer
 Down	 Down	 Text	 Text / Goto
 Power	 Power	 Woofer	 Setup / OPT /
 1	 1	 (())	 Sound / Title
 2	 2	 Audio	 Audio / Lang I/II
 3	 3	 Index	 Info / Angle
 Menu	 Menu / Home	 Normal	 Smart / List
 4	 4	 Recall	 Back / Return
 5	 5	 System	 D.Menu / Top
 6	 6	 Time	 Shift + Sleep / Timer





Originale		Sostituto		Originale		Sostituto	
	Red		Red / Netflix / Search				
	Green		Green / APP / Repeat				
	Yellow		Yellow / YouTube / Repeat				
	Blue		Blue / Prime Video / Random				

