



























 









Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer
 CH+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 Guide	 Guide / EPG / -/-
 CH-	 CH- / Page-
 Netflix	 Shift + Red / Netflix /
 Home	 Menu / Home
 prime video	 Shift + Blue / Prime
 Samsung TV	 TV/Radio /
 Up	 Up
 Disney+	 Picture / Format
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat





Originale	Sostituto
	Yellow / YouTube / Repeat
	Blue / Prime Video / Random
	D.Menu / Top
	Info / Angle
	Subtitle / EQ
	Stop / Hold
	<< / Tune-
	I<< / Preset-
	Play / Slow
	Pause / Step / Freeze
	>> / Tune+
	>>I / Preset+

Originale	Sostituto

