



Originale	Sostituto
	 Power
	 AV / Input / RDS
	 +  Shift + 8
	 TV/Radio /
	 Eject / Surround
	 +  Shift + Setup / OPT / Tools
	 OK
	 Exit / Cancel / Clear
	 Green / APP / Repeat
	 D.Menu / Top
	 Setup / OPT /
	 Up
	 Left
	 +  Shift + OK
	 Right
	 Down
	 Back / Return

Originale	Sostituto
	 Display / Media
	 << / Tune-
	 Play / Slow
	 Pause / Step / Freeze
	 >> / Tune+
	 I<< / Preset-
	 >>I / Preset+
	 Rec / Rec Mode
	 Stop / Hold
	 Vol+
	 Mute / Dimmer
	 CH+ / Page+
	 Vol-
	 CH- / Page-
	 1
	 0
	 3





Originale		Sostituto	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	Subtitle		Subtitle / EQ
	2		2
	Audio		Audio / Lang I/II
	Rec Mode		Shift + Rec / Rec Mode
	Timer		Sleep / Timer
	Edit		Zoom / Size
	Showview		Smart / List

Originale		Sostituto	

