



 


 



 





 





Originale	Sostituto
	 Power
	 Setup / OPT /
	 Audio / Lang I/II
	 Exit / Cancel / Clear
	 7
	 8
	 Display / Media
	 I<< / Preset-
	 Play / Slow
	 Pause / Step / Freeze
	 >>I / Preset+
	 CH+ / Page+
	 Vol+
	 Up
	 CH- / Page-
	 Mute / Dimmer
	 Down

Originale	Sostituto
	 Vol-
	 Sound / Title
	 << / Tune-
	 >> / Tune+
	 Left
	 Right
	 Shift + Mute / Dimmer
	 Sleep / Timer

