

 





 





























| Originale | Sostituto | Originale | Sostituto |
|---|-----------|---|-----------------------|
|  | Power |  | Power |
|  | Mute |  | Mute / Dimmer |
|  | Stop |  | Stop / Hold |
|  | I/II |  | Audio / Lang I/II |
|  | [*] |  | Subtitle / EQ |
|  | 16:9 |  | Picture / Format |
|  | Timer |  | Sleep / Timer |
|  | TV |  | TV/Radio / |
|  | [] |  | Setup / OPT / |
|  | TXT |  | Text / Goto |
|  | AV |  | AV / Input / RDS |
|  | Menu |  | Menu / Home |
|  | Up |  | Up |
|  | Index |  | Info / Angle |
|  | Left |  | Left |
|  | Exit |  | Exit / Cancel / Clear |
|  | Down |  | Down |

| Originale | Sostituto | Originale | Sostituto |
|---|-----------|---|-------------------|
|  | Vol+ |  | Vol+ |
|  | Mix |  | Smart / List |
|  | CH+ |  | CH+ / Page+ |
|  | Vol- |  | Vol- |
|  | <> |  | Display / Media |
|  | CH- |  | CH- / Page- |
|  | 1 |  | 1 |
|  | 2 |  | 2 |
|  | 3 |  | 3 |
|  | 4 |  | 4 |
|  | 5 |  | 5 |
|  | 6 |  | 6 |
|  | 7 |  | 7 |
|  | 8 |  | 8 |
|  | 9 |  | 9 |
|  | 0 |  | 0 |
|  | ? |  | Fav / Marker / PC |



