



Originale	Sostituto
	
Mute	Mute / Dimmer
	
I/II	Audio / Lang I/II
[ * ]	Subtitle / EQ
	Picture / Format
Timer	Sleep / Timer
TV	TV/Radio /
[ ]	Setup / OPT /
TXT	Text / Goto
AV	AV / Input / RDS
Menu	Menu / Home
Up	Up
Index	Info / Angle
Left	Left
Exit	Exit / Cancel / Clear
Down	Down

Originale	Sostituto
Vol+	Vol+
Mix	Smart / List
CH+	CH+ / Page+
Vol-	Vol-
<>	Display / Media
CH-	CH- / Page-
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
0	0
?	Fav / Marker / PC





Originale	Sostituto
 Red	 Red / Netflix / Search
 Green	 Green / APP / Repeat
 Yellow	 Yellow / YouTube / Repeat
 Blue	 Blue / Prime Video / Random
 Vol+	 Shift + Vol+
 ↑ ↓	 Shift + Smart / List

Originale	Sostituto

