



 

 

 

 



 

 

 



 

 



 









Originale	Sostituto
Input	AV / Input / RDS
Wide	Picture / Format
Power	Power
Theater	TV/Radio /
<</<II/<I	<< / Tune-
Play	Play / Slow
I>/II>/>>	>> / Tune+
Sync Menu	Shift + Display / Media
I<<	I<< / Preset-
Stop	Stop / Hold
>>I	>>I / Preset+
i-Manual	Text / Goto
Scene	Shift + Fav / Marker / PC
Top Menu	D.Menu / Top
Menu BD/DVD	Shift + D.Menu / Top Menu
CC/Subtitle	Subtitle / EQ
Internet Widgets	Shift + Smart / List

Originale	Sostituto
Internet Video	Eject / Surround
Qriocity	Audio / Lang I/II
Favorites	Fav / Marker / PC
Guide	Guide / EPG / -/--
Up	Up
Display	Display / Media
Left	Left
OK	OK
Right	Right
Return	Back / Return
Down	Down
Options	Setup / OPT /
Home/Menu	Menu / Home
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
Red	Red / Netflix / Search
Green	Green / APP / Repeat





Originale	Sostituto
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	
	

Originale	Sostituto
	



 



 

 

 

 

 





 




 
 

 

 


 
 



 

 









 
 
 









 



 






 









 
 


 
 





 









 
 
 
 


Originale	Sostituto	Originale	Sostituto
 Input	 AV / Input / RDS	 Return	 Back / Return
 Power	 Power	 Down	 Down
 <</< </>>	 << / Tune-	 Options	 Setup / OPT /
 Play	 Play / Slow	 Home/Menu	 Menu / Home
 >/ >/>>	 >> / Tune+	 Yellow	 Yellow / YouTube / Repeat
 <<	 << / Preset-	 Blue	 Blue / Prime Video / Random
 Stop	 Stop / Hold	 Red	 Red / Netflix / Search
 >>	 >> / Preset+	 Green	 Green / APP / Repeat
 Top Menu	 D.Menu / Top	 1	 1
 Menu BD/DVD	 Picture / Format	 2	 2
 Favorites	 Fav / Marker / PC	 3	 3
 Guide	 Guide / EPG / -/--	 4	 4
 Up	 Up	 5	 5
 Display	 Display / Media	 6	 6
 Left	 Left	 7	 7
 OK	 OK	 8	 8
 Right	 Right	 9	 9



 

 



 

 

 

 













 









 

 



 



 





 





Originale	Sostituto	Originale	Sostituto
 Input	 AV / Input / RDS	 5	 5
 Power	 Power	 6	 6
 Menu BD/DVD	 D.Menu / Top	 7	 7
 Favorites	 Fav / Marker / PC	 8	 8
 Guide	 Guide / EPG / -/--	 9	 9
 Up	 Up	 0	 Smart / List
 Display	 Display / Media	 ENT	 Exit / Cancel / Clear
 Left	 Left	 Vol+	 Vol+
 OK	 OK	 CH+	 CH+ / Page+
 Right	 Right	 Muting	 Mute / Dimmer
 Return	 Back / Return	 Vol-	 Vol-
 Down	 Down	 CH-	 CH- / Page-
 Home/Menu	 Menu / Home	 Jump	 Picture / Format
 1	 1		
 2	 2		
 3	 3		
 4	 4		

Originale	Sostituto	Originale	Sostituto
 5	 5	 TAPES	 5
 6	 6	 TUNER	 6
 7	 7	 AUX - HDD	 7
 8	 8	 USB	 8
 9	 9	 BLUETOOTH	 9
 0	 0	 HDMI - SAT	 0
 ENT	 ENT	 CLEAR EXIT CANCEL	 CLEAR EXIT CANCEL
 Vol+	 Vol+	 VOL +	 VOL +
 CH+	 CH+	 CH +	 CH +
 Muting	 Muting	 DIMMER MUTE	 DIMMER MUTE
 Vol-	 Vol-	 VOL -	 VOL -
 CH-	 CH-	 CH PAGE	 CH PAGE
 Jump	 Jump	 FORMAT PICTURE	 FORMAT PICTURE





Originale		Sostituto	
	Input		AV / Input / RDS
	Power		Power
	<</<I/<II		<< / Tune-
	II>/I/>>>		>> / Tune+
	I<<		I<< / Preset-
	>>I		>>I / Preset+
	Menu BD/DVD		D.Menu / Top
	Up		Up
	Display		Display / Media
	Left		Left
	OK		OK
	Right		Right
	Down		Down
	Home/Menu		Menu / Home
	1		1
	2		2
	3		3

Originale		Sostituto	
	4		4
	5		5
	6		6
	7		7
	8		8
	9		9
	0		0
	ENT		Exit / Cancel / Clear
	Vol+		Vol+
	Muting		Mute / Dimmer
	Vol-		Vol-

