



 

















 

 



 

 







Originale	Sostituto
 On	 Power
 Standby	 Shift + Power
 Search	 Red / Netflix / Search
 HDMI	 0
 HDBaseT	 Display / Media
 DVI-D	 Blue / Prime Video / Random
 Computer	 Fav / Marker / PC
 BNC	 Green / APP / Repeat
 LAN	 D.Menu / Top
 SDI	 AV / Input / RDS
 Auto	 Guide / EPG / -/--
 Aspect	 Shift + Picture / Format
 Color Mode	 Picture / Format
 Test Pattern	 Text / Goto
 Freeze	 Pause / Step / Freeze
 Split	 Back / Return
 Lens Shift	 Subtitle / EQ

Originale	Sostituto
 Zoom	 Zoom / Size
 Focus	 Setup / OPT /
 Menu	 Menu / Home
 Esc/Mouse	 Exit / Cancel / Clear
 Up	 Up
 Left	 Left
 Enter/Mouse	 OK
 Right	 Right
 Down	 Down
 A/V Mute	 Mute / Dimmer
 Default	 Audio / Lang I/II
 Page Up	 CH+ / Page+
 Volume+	 Vol+
 E-Zoom+	 >>I / Preset+
 Page Down	 CH- / Page-
 Volume-	 Vol-
 E-Zoom-	 I<< / Preset-





Originale	Sostituto	Originale	Sostituto
	i Info / Angle		
	Geometry Smart / List		
	Memory Rec / Rec Mode		
	1/User 1 1		
	2/User 2 2		
	3/User3 3		
	4 4		
	5 5		
	6 6		
	7 7		
	8 8		
	9 9		
	Home Shift + Menu /		

