





































 


 




Originale	Sostituto
 Power	 Power
 Source	 AV / Input / RDS
 Ball	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TTX/MIX	 Text / Goto
 0	 0
 PRE-CH	 Fav / Marker / PC
 Vol+	 Vol+
 Mute	 Mute / Dimmer

Originale	Sostituto
 P+	 CH+ / Page+
 Vol-	 Vol-
 CH.List	 Shift + Smart / List
 P-	 CH- / Page-
 Menu	 Menu / Home
 Smart Hub	 Smart / List
 Guide	 Guide / EPG / -/--
 Tools	 Setup / OPT /
 Up	 Up
 Info	 Info / Angle
 Left	 Left
 Enter	 OK
 Right	 Right
 Return	 Back / Return
 Down	 Down
 Exit	 Exit / Cancel / Clear
 Red/A	 Red / Netflix / Search





Originale	Sostituto
Green/B	Green / APP / Repeat
Yellow/C	Yellow / YouTobe / Repeat
Blue/D	Blue / Prime Video / Random
SLEEP	Sleep / Timer
SEARCH	Shift + Red / Netflix /
P.SIZE	Zoom / Size
E-MANUAL	D.Menu / Top
PIP	Picture / Format
AD/SUBT.	Subtitle / EQ
<<	<< / Tune-
Pause	Pause / Step / Freeze
>>	>> / Tune+
Rec	Rec / Rec Mode
Play	Play / Slow
Stop	Stop / Hold

Originale	Sostituto

