



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Vol+ Tv		Vol+
	Power Tv		Shift + Power		Clear		Exit / Cancel / Clear
	DVD		Shift + 2		0		0
	VCR		Shift + 4		AV/Input		AV / Input / RDS
	Eject/Open-Close		Eject / Surround		Vol- Tv		Vol-
	AV/Input Tv		Shift + AV / Input / RDS		<<		<< / Tune-
	1		1		>>		>> / Tune+
	2		2		I<<		I<< / Preset-
	3		3		>>I		>>I / Preset+
	PR/CH+ Tv		Shift + CH+ /		Pause/Step		Pause / Step / Freeze
	4		4		Play		Play / Slow
	5		5		Stop		Stop / Hold
	6		6		Home		Menu / Home
	PR/CH- Tv		Shift + CH- /		Up		Up
	7		7		PR/CH/TRK+		CH+ / Page+
	8		8		Disc Menu/List		D.Menu / Top
	9		9		Disc Menu/List		Smart / List





Originale	Sostituto
	Left
	OK
	Right
	Display / Media
	CH- / Page-
	Down
	Back / Return
	Audio / Lang I/II
	Subtitle / EQ
	Zoom / Size
	Sleep / Timer
	Rec / Rec Mode
	Shift + Rec / Rec Mode
	Info / Angle
	Sound / Title
	Setup / OPT /
	Fav / Marker / PC

Originale	Sostituto
	Red / Netflix / Search
	Picture / Format
	Text / Goto
	TV/Radio /
	Shift + Sleep / Timer
	Guide / EPG / -/--

