 



 



 



 













 

















 







 

 



 



 



 





Originale		Sostituto		Originale		Sostituto	
	TV/SAT		AV / Input / RDS		OK		OK
	Standby		Power		Menu		Menu / Home
	1		1		Right / Vol+		Right
	2		2		Right / Vol+		Vol+
	3		3		Down		Down
	4		4		CH/Page-		CH- / Page-
	5		5		CH/Page+		CH+ / Page+
	6		6		List		Smart / List
	7		7		i		Info / Angle
	8		8		P.Guide		Guide / EPG / -/--
	9		9		FAV		Fav / Marker / PC
	ESC TXT		Text / Goto		Mute		Mute / Dimmer
	0 +/-		0		Audio		Audio / Lang I/II
	Help		D.Menu / Top		Radio		TV/Radio /
	Up		Up		Zoom		Zoom / Size
	Left / Vol-		Left		Red / Add / East		Red / Netflix / Search
	Left / Vol-		Vol-		Green / Lang / Locsat		Shift + Audio / Lang I/II



