 


















 





 










Originale	Sostituto
 Power	 Power
 TTX	 Text / Goto
 Fav	 Fav / Marker / PC
 Audio	 Audio / Lang I/II
 Mute	 Mute / Dimmer
 Play	 Play / Slow
 Pause	 Pause / Step / Freeze
 <<	 << / Tune-
 >>	 >> / Tune+
 Red / SOS	 Red / Netflix / Search
 Green / Sous	 Green / APP / Repeat
 Green / Sous	 Subtitle / EQ
 Yellow / Enreg	 Yellow / YouTube / Repeat
 Blue / Timer	 Blue / Prime Video / Random
 Blue / Timer	 Sleep / Timer
 Guide	 Guide / EPG / -/--
 Up	 Up

Originale	Sostituto
 Infos	 Info / Angle
 Left	 Left
 OK	 OK
 Right	 Right
 Menu	 Menu / Home
 Down	 Down
 Quit	 Exit / Cancel / Clear
 Vol+	 Vol+
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 Vol-	 Vol-
 Stop	 Stop / Hold
 CH-	 CH- / Page-
 1	 1
 2	 2
 3	 3
 4	 4



