






















Originale	Sostituto
 Power	 Power
 Clock	 Sleep / Timer
 Preset	 Setup / OPT /
 VPS	 Smart / List
 1	 1
 2	 2
 3	 3
 Prog	 TV/Radio /
 4	 4
 5	 5
 6	 6
 +	 CH+ / Page+
 7	 7
 8	 8
 9	 9
 -	 CH- / Page-
 CL	 Menu / Home

Originale	Sostituto
 O/AV	 AV / Input / RDS
 O/AV	 0
 OK	 OK
 ATR	 D.Menu / Top
 TV/VCR	 Display / Media
 Index	 Info / Angle
 <<	 << / Tune-
 Play	 Play / Slow
 >>	 >> / Tune+
 Stop	 Stop / Hold
 Pause / Still	 Pause / Step / Freeze
 Rec	 Rec / Rec Mode
 Reset	 Exit / Cancel / Clear
 Memory	 Text / Goto

