




 

 


 





 






 




Originale	Sostituto
 Mute	 Mute / Dimmer
 Power	 Power
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 PRE-CH	 Fav / Marker / PC
 0	 0
 List	 Smart / List
 Vol+	 Vol+
 [i]	 Info / Angle
 P+	 CH+ / Page+

Originale	Sostituto
 Vol-	 Vol-
 *	 D.Menu / Top
 P-	 CH- / Page-
 Home	 Menu / Home
 Up	 Up
 =	 Setup / OPT /
 Left	 Left
 OK	 OK
 Right	 Right
 Back	 Back / Return
 Down	 Down
 Input	 AV / Input / RDS
 Exit	 Exit / Cancel / Clear
 Guide	 Guide / EPG / -/-
 Text	 Text / Goto
 Lang	 Audio / Lang I/II
 Subt.	 Subtitle / EQ




Originale
Sostituto

	Red		Red / Netflix / Search
	Green		Green / APP / Repeat
	Yellow		Yellow / YouTube / Repeat
	Blue		Blue / Prime Video / Random
	<<		<< / Tune-
	Pause		Pause / Step / Freeze
	>>		>> / Tune+
	Zoom		Zoom / Size
	Play		Play / Slow
	Stop		Stop / Hold
	Netflix		Shift + Red / Netflix /

Originale
Sostituto

