






















 



























 



 















Originale	Sostituto
 Marche	 Power
 Eject	 Eject / Surround
 Up	 Up
 EFF./Clear	 Exit / Cancel / Clear
 Left	 Left
 Right	 Right
 OK/Horloge	 OK
 Down	 Down
 i	 Info / Angle
 Pause	 Pause / Step / Freeze
 >>/AV	 >> / Tune+
 <</RET	 << / Tune-
 Play/Lect	 Play / Slow
 ENR/DEP	 Rec / Rec Mode
 Stop	 Stop / Hold
 1	 1
 2	 2

Originale	Sostituto
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 TV / Video	 TV/Radio /
 TV / Video	 Shift + 4
 TV / Video	 Shift + 1
 0	 0
 Zappub	 Smart / List
 LP	 Setup / OPT /
 AV	 AV / Input / RDS
 Verrouillage	 Display / Media
 Smart Stop	 Shift + Stop /
 Smart Repeat	 Green / APP / Repeat

