





 

 

 





 










 










Originale	Sostituto
 Power	 Power
 Eject	 Eject / Surround
 OTPB	 Smart / List
 Showview	 D.Menu / Top
 Tv/VCR	 TV/Radio /
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 Channel+	 CH+ / Page+
 0	 0
 Channel-	 CH- / Page-

Originale	Sostituto
 Clear	 Exit / Cancel / Clear
 Enter	 Mute / Dimmer
 Enter	 Shift + OK
 << Search	 I<< / Preset-
 Search >>	 >>I / Preset+
 Pause/Still	 Pause / Step / Freeze
 Play	 Play / Slow
 Rec/OTR	 Rec / Rec Mode
 <</REW	 << / Tune-
 >>/F.FWD	 >> / Tune+
 Stop	 Stop / Hold
 Menu	 Menu / Home
 Up	 Up
 D/WLY	 Red / Netflix / Search
 ADD T	 Green / APP / Repeat
 Left	 Left
 OK	 OK





Originale		Sostituto		Originale		Sostituto	
	Right		Right				
	SP/LP		Picture / Format				
	Index		Info / Angle				
	+		Vol+				
	Down		Down				
	Memo		Blue / Prime Video / Random				
	Reset		Back / Return				
	Display		Display / Media				
	-		Vol-				
	A-TR		Text / Goto				
	CH NO. Set		AV / Input / RDS				
	Clock Set		Setup / OPT /				
	Auto Set		Zoom / Size				

