 
















 








 









 
 

 







 



 
























 

 
 



 

 

 



 
 




Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute / Dimmer		+10		Guide / EPG / -/-
	L/R/ST		D.Menu / Top		Clear		Exit / Cancel / Clear
	Open / Close		Eject / Surround		Menu		Menu / Home
	NTSC / PAL		Picture / Format		Up		Up
	1		1		Search		Red / Netflix / Search
	2		2		Left		Left
	3		3		Enter		OK
	Angle		Info / Angle		Right		Right
	4		4		Set Up		Setup / OPT /
	5		5		Down		Down
	6		6		Play		Play / Slow
	Audio		Audio / Lang I/II		Title		Sound / Title
	7		7		Pause		Pause / Step / Freeze
	8		8		Stop		Stop / Hold
	9		9		PBC		Smart / List
	Subtitle		Subtitle / EQ		Return		Back / Return





	Originale	Sostituto	Originale	Sostituto
	I<< Skip	 I<< / Preset-		
	Skip >>I	 >>I / Preset+		
	Slow	 +  Shift + Play /		
	Program	 TV/Radio /		
	<< Scan	 << / Tune-		
	Scan >>	 >> / Tune+		
	Repeat	 Green / APP / Repeat		
	AB	 Yellow / YouTube / Repeat		
	Zoom	 Zoom / Size		
	Step	 +  Shift + Pause / Step /		
	Vol-	 Vol-		
	Vol+	 Vol+		
	Display	 Display / Media		
	Key-	 CH- / Page-		
	Key+	 CH+ / Page+		

