







 












Originale	Sostituto
 Power	 Power
 Open / Close	 Eject / Surround
 Mode	 Smart / List
 Menu	 Menu / Home
 Sleep	 Sleep / Timer
 Snooze	 Display / Media
 BT Pair	 Shift + 9
 BT Pair	 AV / Input / RDS
 Alarm 1	 Shift + 1
 Alarm 2	 Shift + 2
 Dimmer	 Shift + Mute / Dimmer
 Play / Pause	 Play / Slow
 Play / Pause	 Pause / Step / Freeze
 Stop	 Stop / Hold
 Folder Down	 CH- / Page-
 Folder Up	 CH+ / Page+
 I <<	 I << / Preset-

Originale	Sostituto
 <<	 << / Tune-
 >>	 >> / Tune+
 >>>	 >>> / Preset +
 Random	 Blue / Prime Video / Random
 Up	 Up
 Repeat	 Green / APP / Repeat
 Left	 Left
 OK (Scan)	 OK
 Right	 Right
 EQ	 Subtitle / EQ
 Down	 Down
 Mute	 Mute / Dimmer
 Bass+	 Shift + Up
 Vol+	 Vol+
 Treble+	 Shift + Right
 Bass-	 Shift + Down
 Vol-	 Vol-





Originale	Sostituto
Trebl e-	Shi ft + Left
1	1
2	2
3	3
4	4
5	5
6	6
7	7
8	8
9	9
Fav	Fav / Marker / PC
10/0	0
I nf o	I nf o / Angl e

Originale	Sostituto

