

Originale	Sostituto	Originale	Sostituto
On/Off	 Power	TV/AV	 AV / Input / RDS
Mute	 Mute / Dimmer	Menu	 Menu / Home
Update	 Play / Slow	Menu Up	 Up
Reveal	 Pause / Step / Freeze	Info	 Info / Angle
Txt Stop	 Stop / Hold	Menu Left	 Left
On/Tim	 Rec / Rec Mode	OK Enter	 OK
Color- S.Std	 Sound / Title	Menu Right	 Right
Menu audio	 Audio / Lang I/II	Menu Off	 Exit / Cancel / Clear
Subt.List	 Subtitle / EQ	Menu Down	 Down
Surround	 Eject / Surround	Back	 Back / Return
Color+ P.Std	 Picture / Format	Volume+	 Vol+
Txt Expand	 Zoom / Size	Chan.Up	 CH+ / Page+
Sleep Timer	 Sleep / Timer	Volume-	 Vol-
Return TV	 TV/Radio /	Display	 Display / Media
Menu video	 D.Menu / Top	Chan.Down	 CH- / Page-
Store Text	 Setup / OPT /	1	 1
Text	 Text / Goto	2	 2



[illegible]