









 









 

 
 
 
 







Originale	Sostituto
 Power	 Power
 Mute	 Mute
 Red	 Red
 Green	 Green
 Yellow	 Yellow
 Blue/Menu	 Blue
 Blue/Menu	 Menu
 TV System	 TV/R
 Zoom	 Shift + Eject
 Setup	 Options
 Eject	 Eject
 Home	 Smart
 Recall	 Pre Ch
 Vol+	 Vol +
 Vol-	 Vol -
 Up	 Up
 Down	 Down

Originale	Sostituto
 Right	 Right
 Left	 Left
 OK	 Ok
 <<	 <<
 Play/Pause	 Play
 >>	 >>
 I>	 Pause
 Stop	 Stop
 I<<	 I<<
 >>I	 >>I
 Info	 Info
 Repeat	 Text
 Subtitle	 Subt
 Audio	 Dual
 Goto	 Guide

