












 















Originale	Sostituto	Originale	Sostituto
On/Off	 Power	5	 5
Mute	 Mute / Dimmer	6	 6
Return TV	 TV/Radio /	7	 7
Menu	 Menu / Home	8	 8
Menu Up	 Up	9	 9
Menu Left	 Left	0/10	 0
OK Enter	 OK	Red	 Red / Netflix / Search
Menu Right	 Right	Green	 Green / APP / Repeat
Menu Down	 Down	Yellow	 Yellow / YouTube / Repeat
Volume+	 Vol+	Blue	 Blue / Prime Video / Random
Chan.Up	 CH+ / Page+		
Volume-	 Vol-		
Chan.Down	 CH- / Page-		
1	 1		
2	 2		
3	 3		
4	 4		

