

 
 
 




 

 
 
 



 
 
 

 

 

 


 
 

 



Originale	Sostituto	Originale	Sostituto
On/Off	 Power	Chan.Up	 Ch +
Mute	 Mute	Volume-	 Vol -
Reveal	 Pause	Chan.Down	 Ch -
Txt Stop	 Stop	1	 1
Sleep Timer	 Sleep	2	 2
Return TV	 TV/R	3	 3
Text	 Text	4	 4
Txt Expand	 Eject	5	 5
TV/AV	 AV	6	 6
Menu	 Menu	7	 7
Menu Up	 Up	8	 8
Menu Left	 Left	9	 9
OK Enter	 Ok	Guide -/-- 1.	 Guide
Menu Right	 Right	0/10	 0
Menu Down	 Down	2.Fav P/C 2.	 Pre Ch
Back	 Back	Disp	 Info
Volume+	 Vol +		

