


 
 
 


 
 


 
 

 
 


 
 
 


 



 
 

 
 
 


 
 



 
 

 
 


 
 

 
 
 
 



 
 


 









Originale		Sostituto		Originale		Sostituto	
	Standby		Power		Zoom/Aspect		3D
	Mute		Mute		CH+		Ch +
	1		1		CH-		Ch -
	2		2		Menu		Menu
	3		3		Exit		Exit
	4		4		Sleep		Sleep
	5		5		Source		AV
	6		6		Up		Up
	7		7		Down		Down
	8		8		Right		Right
	9		9		Left		Left
	0/10		0		OK/Enter		Ok
	Recall/Program		Back		Red		Red
	List/+10		List		Green/R.List		Green
	Vol+		Vol +		Yellow/TList/Title		Yellow
	Vol-		Vol -		Blue/D.Display		Blue
	Info/Display		Info		D.Setup		Smart





Originale		Sostituto		Originale		Sostituto	
	D.Menu		D. Menu		EPG		Guide
	TTX		Text		FAV		Pre Ch
	Open/Close		Eject				
	A-B/Index		Options				
	Goto/Hold		Media				
	I/II/Audio		Dual				
	Rec/Repeat		Rec				
	Stop/Reveal		Stop				
	Play		Play				
	Pause		Pause				
	Size		Format				
	Subtitle		Subt				
	<</Subpage		<<				
	>>		>>				
	Tv/Radio		TV/R				
	I<<		I<<				
	>>I		>>I				

