
 







 




 



 



Originale		Sostituto		Originale		Sostituto	
	Power		Power		Info		Info
	DTV/VCR		Smart		Menu		Menu
	Mute		Mute		EPG		Guide
	1		1		Exit		Exit
	2		2		OK		Ok
	3		3		Up		Up
	4		4		Down		Down
	5		5		Right		Right
	6		6		Left		Left
	7		7		CH+		Ch +
	8		8		CH-		Ch -
	9		9		Vol+		Vol +
	0		0		Vol-		Vol -
	FAV		Pre Ch		Text		Text
	Recall		Back		Pause		Pause
	Audio		Dual		Red		Red
	Subtitle		Subt		Green		Green





### Originale

	Yellow		Yellow
	Blue		Blue
	Tv/Radio		TV/R

### Sostituto

### Originale


### Sostituto



Mandis