



Originale		Sostituto	
	VOL+		Vol+
	MUTE		Mute / Dimmer
	P+		CH+ / Page+
	VOL-		Vol-
	INFO		Info / Angle
	P-		CH- / Page-
	REC		Rec / Rec Mode
	PLAY		Play / Slow
	PAUSE		Pause / Step / Freeze
	STOP		Stop / Hold
	LANG.		Audio / Lang I/II
	<<		<< / Tune-
	>>		>> / Tune+
	[≡]...		Sound / Title
	RED		Red / Netflix / Search
	GREEN		Green / APP / Repeat
	YELLOW		Yellow / YouTube / Repeat

Originale		Sostituto	
	BLUE		Blue / Prime Video / Random

