








 















 







 







Originale	Sostituto
	 Power
	 Mute / Dimmer
	 Guide / EPG / -/--
	 Fav / Marker / PC
	 Shift + CH+ /
	 Shift + CH- /
	 Picture / Format
	 Sound / Title
	 Audio / Lang I/II
	 Sleep / Timer
	 Smart / List
	 AV / Input / RDS
	 Shift + 0
	 Shift + Picture / Format
	 Info / Angle
	 Up
	 Shift + AV / Input / RDS

Originale	Sostituto
	 Left
	 OK
	 Right
	 Exit / Cancel / Clear
	 Down
	 Menu / Home
	 1
	 2
	 3
	 4
	 5
	 6
	 7
	 8
	 D.Menu / Top
	 9
	 0





Originale	Sostituto
 Aller A	 Back / Return
 Vol+	 Vol+
 Media	 Display / Media
 Rec	 Rec / Rec Mode
 CH+	 CH+ / Page+
 Vol-	 Vol-
 SS Tit.	 Subtitle / EQ
 Titre/Tv/Radio	 TV/Radio /
 CH-	 CH- / Page-
 Red/Eject	 Red / Netflix / Search
 Green/D.Menu	 Green / APP / Repeat
 Yellow/Conf.	 Yellow / YouTube / Repeat
 Blue/D.Disp	 Blue / Prime Video / Random
 Play/Pause/Texte	 Play / Slow
 Stop/Index	 Stop / Hold
 A-B/Mix	 Setup / OPT /
 Repeter/Revel.	 Text / Goto

Originale	Sostituto
 <</Maint.	 << / Tune-
 >>/SS Page	 >> / Tune+
 I<</Taille	 I<< / Preset-
 >>I/Annul.	 >>I / Preset+

