





Originale	Sostituto
 POWER	 Power
 MUTE	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 -/--	 Shift + Guide / EPG / -/--
 0	 0
 RECALL	 Back / Return
 RED	 Red / Netflix / Search
 GREEN	 Green / APP / Repeat
 YELLOW	 Yellow / YouTube / Repeat

Originale	Sostituto
 BLUE	 Blue / Prime Video / Random
 MENU	 Menu / Home
 VOL+	 Vol+
 CH+	 CH+ / Page+
 INFO	 Info / Angle
 VOL-	 Vol-
 CH-	 CH- / Page-
	 << / Tune-
	 >> / Tune+
	 Play / Slow
	 Pause / Step / Freeze
	 Stop / Hold
	 Up
	 Left
	 OK
	 Right
	 Guide / EPG / -/--





Originale	Sostituto	Originale	Sostituto
 DOWN	 Down		
 EXIT	 Exit / Cancel / Clear		
 FORMAT	 Picture / Format		
 AUDIO	 Audio / Lang I/II		
 TEXT	 Text / Goto		
 PIP	 Display / Media		
 Timer	 +  Shift + Sleep / Timer		
 zzZ	 Sleep / Timer		

Originale	Sostituto

