 



 















































 


 






 
 








Originale	Sostituto	Originale	Sostituto
 Input	 AV / Input / RDS	 Menu/Exit	 Menu / Home
 Mute	 Mute / Dimmer	 Vol+	 Vol+
 Power	 Power	 Up	 Up
 1	 1	 CH+	 CH+ / Page+
 2	 2	 Vol-	 Vol-
 3	 3	 Left	 Left
 4	 4	 OK	 OK
 5	 5	 Right	 Right
 6	 6	 CH-	 CH- / Page-
 7	 7	 Down	 Down
 8	 8	 FAV	 Fav / Marker / PC
 9	 9	 CH List	 Smart / List
 EPG	 Guide / EPG / -/--	 I/II	 Shift + Audio / Lang I/II
 0	 0	 Sleep	 Sleep / Timer
 Recall	 Back / Return	 USB	 Shift + 8
 [+]	 Display / Media	 Audio	 Audio / Lang I/II
 Menu/Exit	 Exit / Cancel / Clear	 Video	 Shift + 4



