











 







 



 



 



 









 




 








 



 



 




 







Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Home	 Shift + Menu /
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 i	 Info / Angle
 4	 4	 Back	 Back / Return
 5	 5	 Mouse	 Display / Media
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 OK
 EPG	 Guide / EPG / -/--	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Vol-	 Vol-	 prime video	 Shift + Blue / Prime
 Mute	 Mute / Dimmer	 f	 Smart / List
 APPS	 Shift + Green / APP / Repeat	 Red	 Red / Netflix / Search

Originale	Sostituto	Originale	Sostituto
 Power	 Power	 Home	 Shift + Menu /
 Source	 AV / Input / RDS	 P+	 CH+ / Page+
 1	 1	 P-	 CH- / Page-
 2	 2	 Menu	 Menu / Home
 3	 3	 i	 Info / Angle
 4	 4	 Back	 Back / Return
 5	 5	 Mouse	 Display / Media
 6	 6	 Up	 Up
 7	 7	 Down	 Down
 8	 8	 Right	 Right
 9	 9	 Left	 Left
 0	 0	 OK	 OK
 EPG	 Guide / EPG / -/--	 Netflix	 Shift + Red / Netflix /
 Vol+	 Vol+	 YouTube	 Shift + Yellow / YouTube /
 Vol-	 Vol-	 prime video	 Shift + Blue / Prime
 Mute	 Mute / Dimmer	 f	 Smart / List
 APPS	 Shift + Green / APP / Repeat	 Red	 Red / Netflix / Search





	Originale	Sostituto	Originale	Sostituto
	Green	 Green / APP / Repeat		
	Yellow	 Yellow / YouTube / Repeat		
	Blue	 Blue / Prime Video / Random		
	Pause	 Pause / Step / Freeze		
	Play	 Play / Slow		
	Stop	 Stop / Hold		
	<<	 << / Tune-		
	>>	 >> / Tune+		
	Text	 Text / Goto		
	Rec	 Rec / Rec Mode		
	I<<	 I<< / Preset-		
	>>I	 >>I / Preset+		
	MTS	 Fav / Marker / PC		
	Sub	 Subtitle / EQ		

