



 

 

 



 

 

 





 

 

 





 



















 





 

 

 

 







Originale	Sostituto
 Power	 Power
 Mute	 Mute / Dimmer
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 List	 Smart / List
 0	 0
 Recall	 Back / Return
 P.Mode	 Picture / Format
 S.Mode	 Sound / Title
 Sleep	 Sleep / Timer

Originale	Sostituto
 Vol +	 Vol+
 MTS	 Info / Angle
 CH +	 CH+ / Page+
 Vol -	 Vol-
 Aspect	 Shift + Picture / Format
 CH -	 CH- / Page-
 Guide	 Guide / EPG / -/-
 Home	 Shift + Menu /
 Rec	 Rec / Rec Mode
 Menu	 Menu / Home
 Up	 Up
 Source	 AV / Input / RDS
 Left	 Left
 Enter	 OK
 Right	 Right
 Exit	 Exit / Cancel / Clear
 Down	 Down





Originale	Sostituto
Display	Display / Media
Red	Red / Netflix / Search
Green	Green / APP / Repeat
Yellow	Yellow / YouTube / Repeat
Blue	Blue / Prime Video / Random
<< / Index	<< / Tune-
Play/Pause /	Pause / Step / Freeze
Play/Pause /	Shift + Exit / Cancel / Clear
Play/Pause /	Play / Slow
>> / TTX	>> / Tune+
>> / TTX	Text / Goto
I<< / SUB.PG	I<< / Preset-
>>I / Reveal	>>I / Preset+
Stop / Mix	Stop / Hold
CAP	D.Menu / Top
Subtitle	Subtitle / EQ
TV / Radio	TV/Radio /

Originale	Sostituto
FAV	Fav / Marker / PC
Size / Mouse	Zoom / Size
Hold / Refresh	Shift + Stop /

