








 





 





 

 


 













Originale	Sostituto
 Power	 Power
 Mute	 Mute
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0
 -/--	 +  Shift + Guide
 Repeat	 Text
 Vol +	 Vol +
 Vol -	 Vol -
 Pic. Mode	 Options

Originale	Sostituto
 S. Mode	 Dual
 Source	 AV
 CH +	 Ch +
 CH -	 Ch -
 Up	 Up
 Right	 Right
 Down	 Down
 Left	 Left
 OK	 Ok
 CH. Edit	 Smart
 Menu	 Menu
 Aspect	 Format
 Sleep	 Sleep
 Rec	 Rec
 Rec Menu	 +  Shift + Rec
 Red	 Red
 Green	 Green





Originale		Sostituto		Originale	Sostituto
	Yellow		Yellow		
	Blue		Blue		
	CH. Group		3D		
	TV / Radio		TV/R		
	I/II Audio		Shift + Dual		
	Subtitle		Subt		
	EPG		Guide		
	Info		Info		
	Play/Pause / Size		Play		
	Play/Pause / Size		Pause		
	Stop / Reveal		Stop		
	I<< / Text (Page -)		I<<		
	>>I / Index (Page +)		>>I		
	<< / Subpage (FAV -)		<<		
	>> / Hold(Fav +)		>>		

