 










 


 

 
 
 

 



 


 






Originale	Sostituto
 Power	 Power
 Source	 AV
 Vol+	 Vol +
 Vol-	 Vol -
 Mute	 Mute
 PR+	 Ch +
 PR-	 Ch -
 1	 1
 2	 2
 3	 3
 4	 4
 5	 5
 6	 6
 7	 7
 8	 8
 9	 9
 0	 0

Originale	Sostituto
 TV	 TV/R
 Recall	 Pre Ch
 World	 Media
 Menu	 Menu
 Exit	 Exit
 Back	 Back
 i/Info	 Info
 Guide	 Guide
 [≡]/Text	 Text
 */O	 Format
 */O..	 3D
 LANG.	 Dual
 [≡]..	 Subt
 [-O-]	 Options
 Red	 Red
 Green	 Green
 Yellow	 Yellow





Originale	Sostituto	Originale	Sostituto
 Blue	 Blue		
 Rec	 Rec		
 Play	 Play		
 Stop	 Stop		
 Pause	 Pause		
 <<	 <<		
 >>	 >>		
 OK	 Ok		
 Up	 Up		
 Down	 Down		
 Right	 Right		
 Left	 Left		
 Music/Photo/Movi	 Smart		
 Q.Menu	 D. Menu		

Originale	Sostituto

