 



 

 





 


 

 
 

 








 
 
 
 



 


 










Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		Up		Up
	Info		Info		Left		Left
	TTX		Text		OK		Ok
	Recall		Back		Right		Right
	List		List		Down		Down
	1		1		EPG		Guide
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Timer		AV
	5		5		Pg Dn		Shift + Ch -
	6		6		Pg Up		Shift + Ch +
	7		7		<<		<<
	8		8		>>		>>
	9		9		I<<		I<<





 






 

 
 








 


 

 
 
 
 
 





Originale	Sostituto	Originale	Sostituto
>>I	>>I		
CH +	Ch +		
CH -	Ch -		
	Play		
	Pause		
	Stop		
	Dual		
	3D		
	Sleep		
	TV/R		
	Red		
	Format		
	Green		
	Yellow		
	Blue		





Originale		Sostituto		Originale		Sostituto	
	Power		Power		0		0
	Mute		Mute		Menu		Menu
	FAV		Pre Ch		Exit		Exit
	Subtitle		Subt		Up		Up
	Info		Info		Left		Left
	TTX		Text		OK		Ok
	Recall		Back		Right		Right
	List		List		Down		Down
	1		1		EPG		Guide
	2		2		Vol +		Vol +
	3		3		Vol -		Vol -
	4		4		Timer		AV
	5		5		Pg Dn		Shift + Ch -
	6		6		Pg Up		Shift + Ch +
	7		7		<<		<<
	8		8		>>		>>
	9		9		I<<		I<<




 

 
 

 








 




 
 
 











 

	Originale	Sostituto
	>>I	 >>I
	CH +	 Ch +
	CH -	 Ch -
	Play	 Play
	Pause	 Pause
	Stop	 Stop
	Audio	 DUAL
	PAL / NTSC	 3D
	Sleep	 Sleep
	TV / Radio	 TV/R
	Red	 Red
	Aspect	 Format
	Green	 Green
	Yellow	 Yellow
	Blue	 Blue

Originale	Sostituto





Originale	Sostituto	Originale	Sostituto
Power		Power	Power
Mute		Mute	Mute
FAV		Pre Ch	Pre Ch
Subtitle		Subt	Subt
Info		Info	Info
TTX		Text	Text
List		List	List
Recall		Back	Back
1		1	1
2		2	2
3		3	3
4		4	4
5		5	5
6		6	6
7		7	7
8		8	8
9		9	9

Originale	Sostituto	Originale	Sostituto
0		0	0
Menu		Menu	Menu
Exit		Exit	Exit
EPG		Guide	Guide
Swap		Media	Media
Up		Up	Up
Down		Down	Down
Right		Right	Right
Left		Left	Left
OK		Ok	Ok
Vol+		Vol +	Vol +
Vol-		Vol -	Vol -
Pg Up		Shift + Up	Shift + Up
PG Dn		Shift + Down	Shift + Down
CH+		Ch +	Ch +
CH-		Ch -	Ch -
>>		>>	>>





Originale	Sostituto	Originale	Sostituto
<<		<<	
>>		>>	
I<<		I<<	
Play		Play	
Pause/Timeshift		Pause	
Stop		Stop	
Rec		Rec	
Audio		Dual	
M/P		Smart	
Tv/Radio		TV/R	
A-B		Options	
Red/Zoom		Red	
Green/Aspect		Green	
Yellow/V-Formet		Yellow	
Blue/Timer		Blue	

