

 
 






 


 
 

 

 





 

 








 


Originale	Sostituto	Originale	Sostituto
PWR On/Off	 Power	Menu Down	 Down
Mute	 Mute	Back	 Back
Epg	 +  Shift + Guide	Volume+	 Vol +
Info	 +  Shift + Info	CH/Page+	 Ch +
Subt.List	 Subt	Volume-	 Vol -
Sleep Timer	 Sleep	Audio	 Dual
TV	 TV/R	CH/Page-	 Ch -
Video	 D. Menu	1. ?	 1
Text	 Text	2abc	 2
TV/SAT	 AV	3def	 3
Menu	 Menu	4ghi	 4
Menu Up	 Up	5jkl	 5
Display	 Info	6mno	 6
Menu Left	 Left	7pqrm	 7
OK Enter	 Ok	8tuv	 8
Menu Right	 Right	9wxyz	 9
Exit	 Exit	Guide Pilote	 Guide



Originale	Sostituto	Originale	Sostituto
0/10	 0		
FAV Pref.	 Pre Ch		
Red	 Red		
Green	 Green		
Yellow	 Yellow		
Blue	 Blue		
West	 I<<		
Freeze	 Stop		
Lang./Rewind	 <<		
	 Shift + Ch +		
LNB F.Forward	 >>		
H/V Play	 Play		
East	 >>I		
	 Shift + Ch -		

